

# MAX|leen™

## 6 STEP PRE-INSTALLATION CHECKLIST


---

- Replace Crown Bar/Capping Rubber**



- Ensure Crown Bar Rubber covers entire Crown Bar from end to end**


- Perform the “String Test” on Crown Bars to identify any height differences that need correcting**

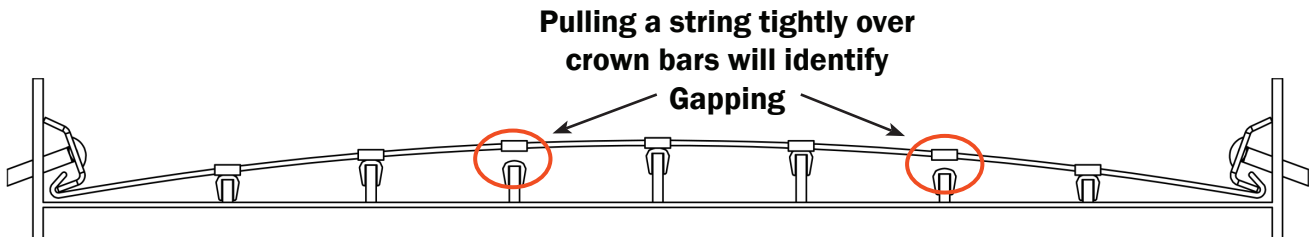

- Measure & compare dimensions of Replacement Screen & Screen Box**

- Clear Screen Ledge (End-Tension) or Clamping Rail (Side-Tension)**

- Check that only Bolt Type Fasteners are being used**

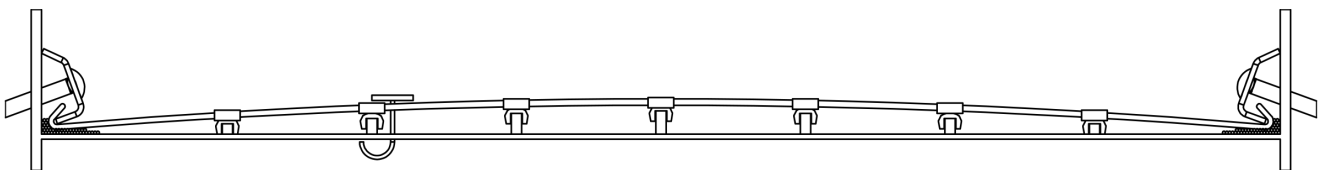

**DO NOT use “J” bolts to install**